





ACE 150S ROCK BREAKER

PARTS LIST

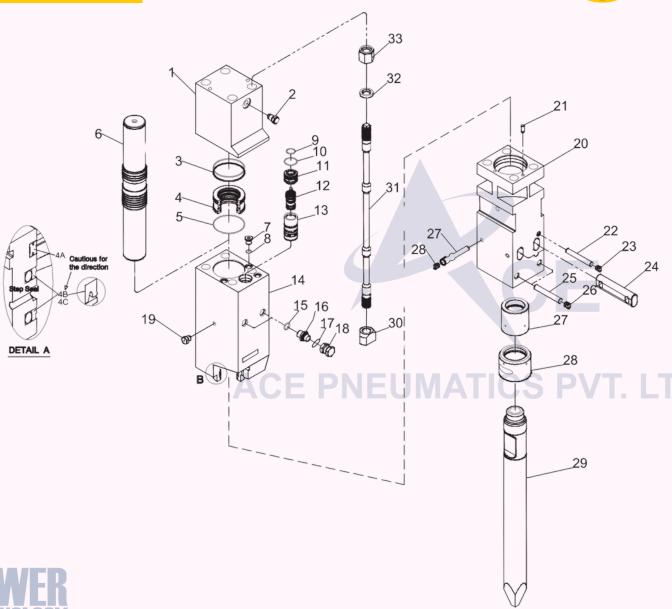

SR.NO.	PART NO.	DESCRIPTION	QTY.
01	1501001	BACKHEAD	01
02	1501002	CHARGING VALVE	01
03	1501003	O-RING	02
04	1501004	RETAINER	01
4A	1501004A	DUSR SEAL	01
4B	1501004B	U-PACKING	01
4C	1501004C	BUFFER SEAL	01
05	1501005	O-RING	01
06	1501006	PISTON	01
07	1501007	SOCKET PLUG	01
08	1501008	O-RING	01
09	1501009	O-RING	01
10	1501010	O-RING	01
11	1501011	VALVE PLUG	01
12	1501012	VALVE	01
13	1501013	VALVE SLEEVE	01
14	1501014	CYLINDER	01
15	1501015	O-RING	02
16	1501016	ADAPTOR	02
17	1501017	O-RING	02
18	1501018	UNION CAP	02
19	1501019	AIR CHUCK VALVE	01
20	1501020	FRONT HEAD	01
21	1501021	HALLOW HEX	01
22	1501022	STOP PIN	02
23	1501023	RUBBER RING	02
24	1501024	ROD PIN	02
25	1501025	FRONT HEAD PIN	02
26	1501026	RUBBER PLUG	02
27	1501027	INNER BUSH	01
28	1501028	FRONT BUSH	01
29	1501029	CHISEL	01
30	1501030	NUT	04
31	1501031	THROUGH BOLT	04
32	1501032	WASHER	04
33	1501033	NUT	04



 










ACE 150S ROCK BREAKER

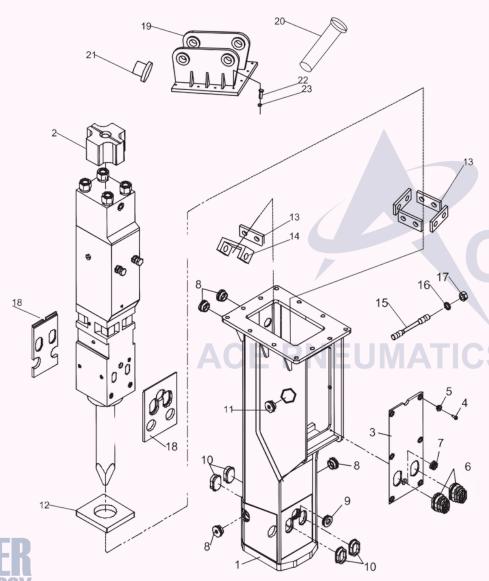

SR.NO.	PART NO.	DESCRIPTION	QTY. / TOOL
01	1501034	BRACKET HOUSING	01
02	1501035	UPPER DAMPER	01
03	1501036	WINDOW COVER	01
04	1501037	HEX BOLT	06
05	1501038	WASHER	06
06	1501039	HOSE BELLOWS	02
07	1501040	PLUG	01
08	1501041	SOUND PLUG	04
09	1501042	GREASE PLUG	01
10	1501043	SOUND PLUG	04
11	1501044	SOUND PLUG	02
12	1501045	DAMPER BOTTOM	01
13	1501046	DAMPER PAD	5
S 14-V	1501047	SUPPORT BRACKET	01
15	1501048	SUPPORT BOLT	01
16	1501049	WASHER	02
17	1501050	NUT	02
18	1501051	WEAR PLATE	02
19	1501052	MOUNTING BRACKET	01
20	1501053	BRACKET PIN	02
21	1501054	BRACKET BUSH	04
22	1501055	BRACKET BOLT	12
23	1501056	BRACKET NUT	12

